

# WIRELESS REAR LIGHTS KIT



## 1. Specification

Charging voltage	DC5V	
Working Frequency	2.4G	
Radio communication range	20Meters	
Battery capacity	3.7V/2200mA	
Charging time	2~3 hours	
Waterproof level	IP65	
Operation temperature	-10°C ~ 50°C	
Working time	100%	10h
	50%	5h
	25%	2h

## Cautions




Please check the battery status, ensure the lights are full charging before using

Please check each function work normally before using  
If the lights are not in use, please check the battery every 6month


The code matching process must be imposed on the replacement light or additional light

Regular checking the lights after long-time using

## 2. Kits Including

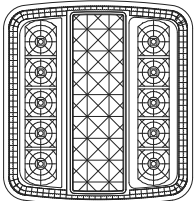


LH Light X1

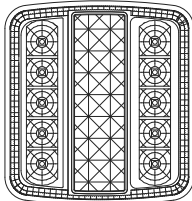

RH Light X1



 Transmitter X1





Charging cable X1



Car Charger X1

## 3. Instruction of Light

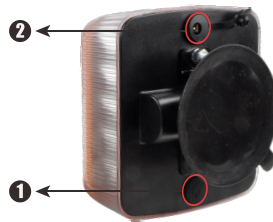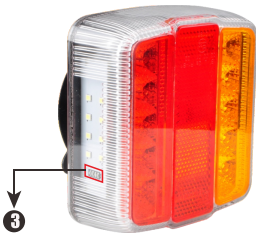

**1** On/Off Switch

**2** Charging Port

**3** Battery Indicator

## 4. Battery Checking



100%

80%

50%

25%



When the red light of the indicator is flashing for your safety please charge the light

## 5. Installation Guidance


### ① Plug the transmitter into the Socket on the vehicles




### ② Turn on the RH & LH light



### ③ Start the engine

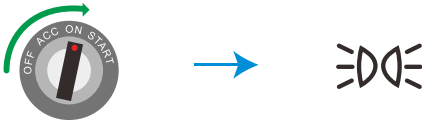

### ④ Testing

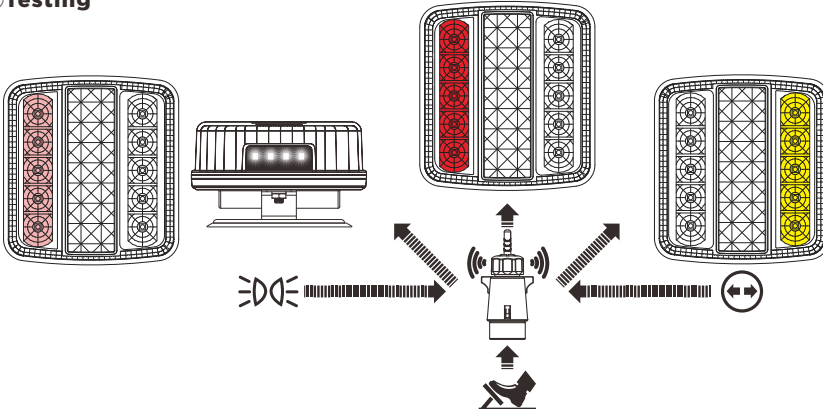

### ⑤ Mount the RH & LH light on the metal surface of vehicles


#### Notice

If you want to replace one single light of the original set by a new light, the code matching process is necessary, please refer to the "code matching process" in the appendix in this brochure

## Appendix

### Code Matching Process

1. Make sure the transmitter already been installed successfully and work normally .
2. Start the engine, Then turn on the tail light( turn light, tail light, brake light , any light is suitable for code matching)

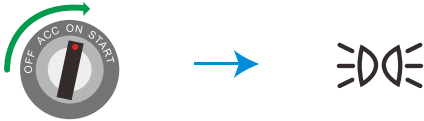

3. Activate the replacing light



When the light flashes, it was activated successfully

4. Code Matching



Matching in progress →

Matching complete →

5. Testing

